


Getting Started

Rear Panel

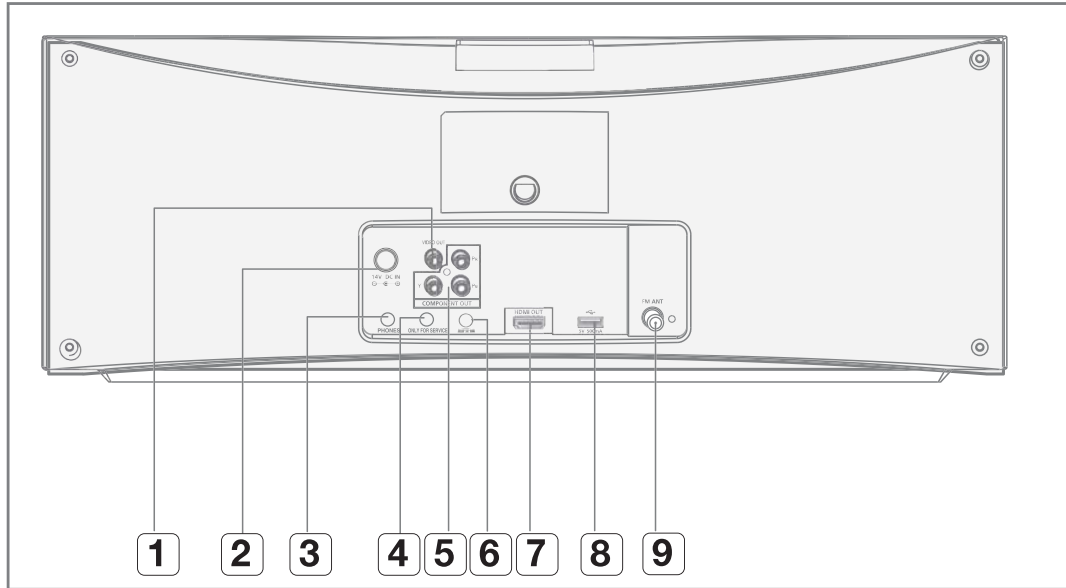

| | | |
|----------|-------------------------------------|--|
| 1 | VIDEO OUT JACK | Connect your TV's Video Input jack (VIDEO IN) to the VIDEO OUT jack. |
| 2 | 14V DC IN JACK | Connect the DC adapter to this product. |
| 3 | PHONES | Connect headphones. |
| 4 | ONLY FOR SERVICE | For testing only. Do not use. |
| 5 | COMPONENT VIDEO OUTPUT JACKS | Connect a TV with Component video inputs to these jacks. |
| 6 | AUX IN JACK(AUDIO) | Connect to the audio out of an external device(such as a VCR). |
| 7 | HDMI OUT JACK | Use an HDMI cable to connect this HDMI output terminal to the HDMI input terminal on your TV for the best quality picture. |
| 8 | USB JACK | Connect external USB storage devices such as MP3 players, USB flash memory, etc. |
| 9 | FM ANTENNA JACK | Connect the FM antenna. |

Where to Install Your Micro-Compact System

To take full advantage of your new Micro-compact system, follow these installation instructions before connecting the unit.

- Install the system on a flat, stable surface.
- Never place this unit on carpeting.
- Never place this unit in an outdoor area.
- Maintain an open space of approximately 6 inches (15 cm) on the sides and rear of the system, for ventilation purposes.
- Make sure that you have enough room to open the compact disc compartment easily.
- Software upgrades using the USB Port must be performed with a USB memory flash stick only.
- Do not obstruct the ventilation holes.